


1 Board Overview

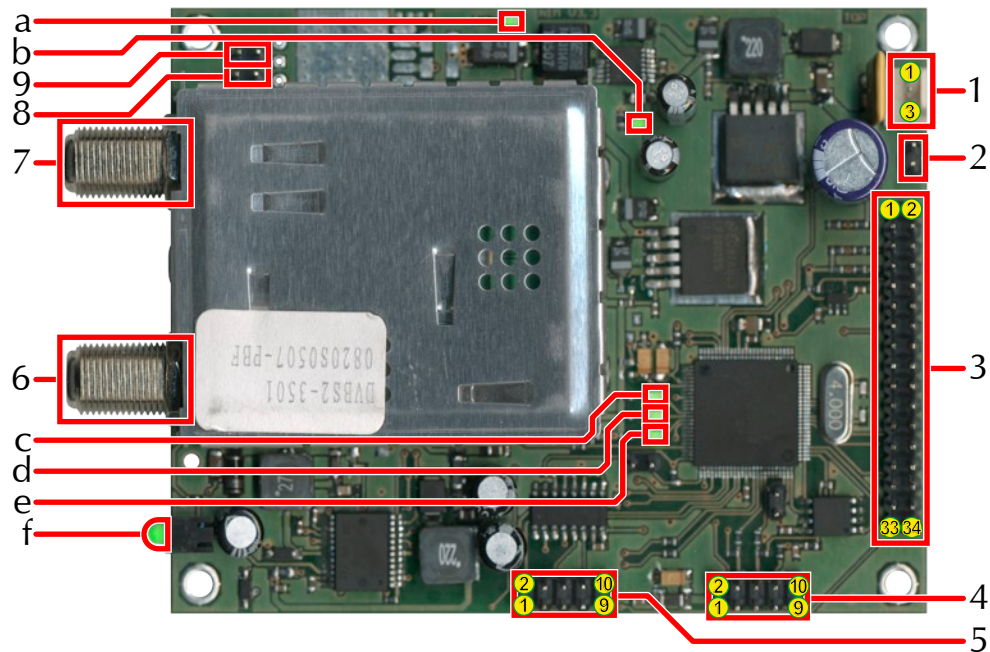

board dimensions: 100×80 mm

Connectors	1	3pin Header	Power Input
	2	Jumper	Power Jumper
	3	34pin Header	Transportstream Output
	4	10pin Header	I ² C-Bus for Display + Keyunit
	5	10pin Header	RS232
	6	F Connector 75 Ω	RF (Loopthrough-) Output
	7	F Connector 75 Ω	RF Input
	8	Jumper	setting LNB Power on/off for 7
	9	Jumper	setting LNB Power on/off for 8

LEDs	a	LED green	3,3 V ok
	b	LED green	5 V ok
	c	LED green	RF Lock
	d	LED green	NIM found
	e	LED green	alive
	f	LED green	RF Lock (same as c)

2 Connector description

1 – Power Input	
1	+9.0 ... +15.0 V
2	GND
3	GND

2 – Power Jumper	
must be set when powered over TS or if an <i>ASI out-Board</i> is connected, otherwise must be unset .	

3 – TS out			
1	+5.0 V	2	+5.0 V
3	+5.0 V	4	+5.0 V
5	SDA	6	not connected
7	SCL	8	xReset
9	GND	10	GND
11	TS CLK	12	TS PSYM
13	not connected	14	TS DVAL
15	TS 6	16	TS 7

3 – TS out			
17	TS 4	18	TS 5
19	TS 2	20	TS 3
21	TS 0	22	TS 1
23	GND	24	GND
25	reserved	26	reserved
27	reserved	28	reserved
29	GND	30	GND
31	not connected	32	not connected
33	not connected	34	not connected

4 – I²C (Display + Keyunit)			
1	+5.0 V	2	+5.0 V
3	SDA	4	SDA
5	SCL	6	SCL
7	Reset-In	8	IRQ
9	GND	10	GND

5 – RS232			
1	not connected	2	TxD
3	RxD	4	con. with 6+7
5	GND	6	con. with 4+7
7	con. with 4+6	8	not connected
9	not connected	10	GND

8 – LNB Power Jumper	
set: LNB-Power at 7 is on. unset: LNB-Power at 7 is off.	

9 – LNB Power Jumper	
set: LNB-Power at 6 is on. unset: LNB-Power at 6 is off.	

Errata/corrections:

07.10.2009 First release.

The information in this manual was compiled with high care and to our best knowledge; nevertheless there might be some errors left in this document. We do not take legal or any other responsibility for the correctness of any information.

This document is protected by copyright law. All rights including copying, translation, microfilming as well as storage and processing in electronic systems are reserved.

We are happy to receive your comments and questions:

SR-Systems
 Brüder-Grimm-Straße 130
 36396 Steinau
 Tel.: +49 (66 63) 91 88 66
 Fax: +49 (66 63) 91 88 67
 eMail: DATV@SR-Systems.de